

BANKS FORD 6.0L POWERSTROKE TUNER MODULE

Supplemental Instructions for Improved Harness Connector Retention

FOR USE WITH SYSTEMS 61023, 63749, 63743, 63747, 63745 and 63748.

1. Be sure both 46-pin harness connectors are fully seated and latched into their respective receptacles on the Banks module.
2. Install the supplied 1/8" wide x 11" long BLACK cable ties around each connector housing and locking lever as shown in Figures 1 & 2 below (one cable tie per connector).
3. Before fully tightening, make sure the cable ties are situated below both rear lower corners (Figure 1) and also under the front rib/ridge of the connectors (Figure 2).
4. Securely tighten both cable ties and cut off any excess.

Figure 1


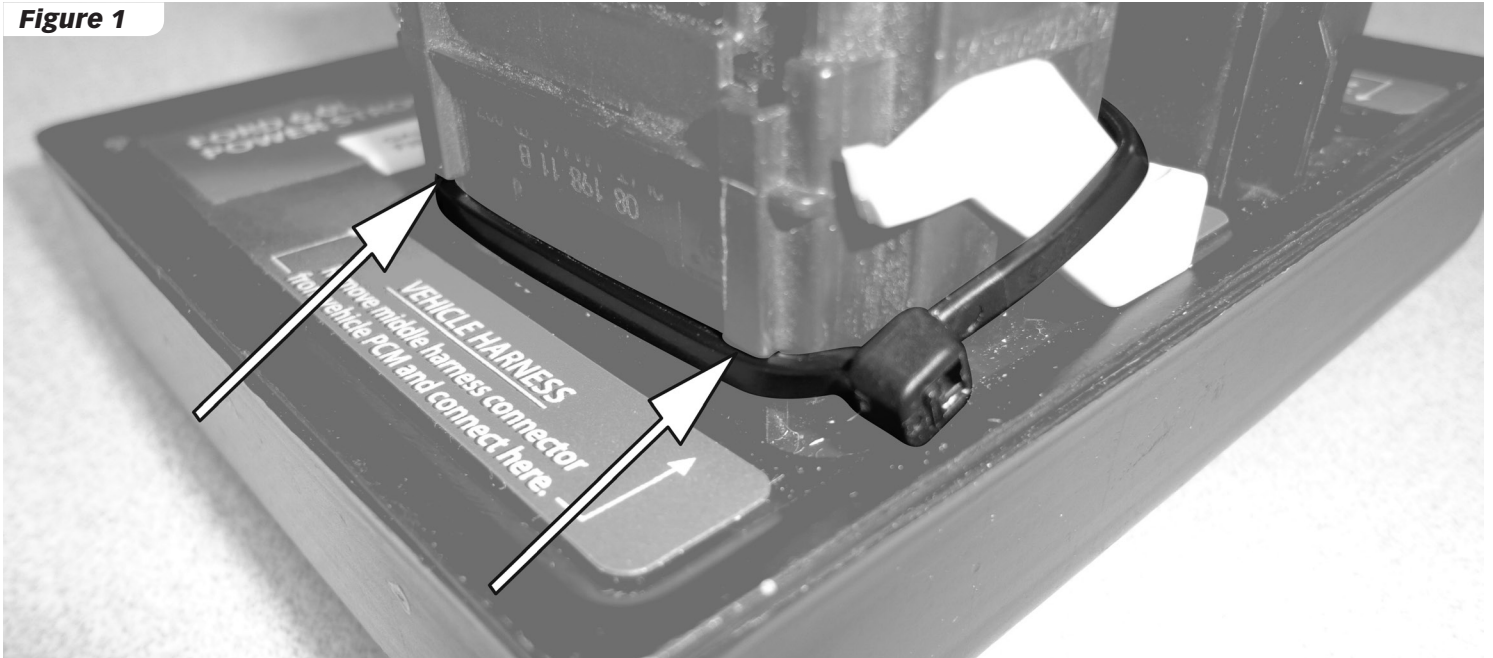


Figure 2

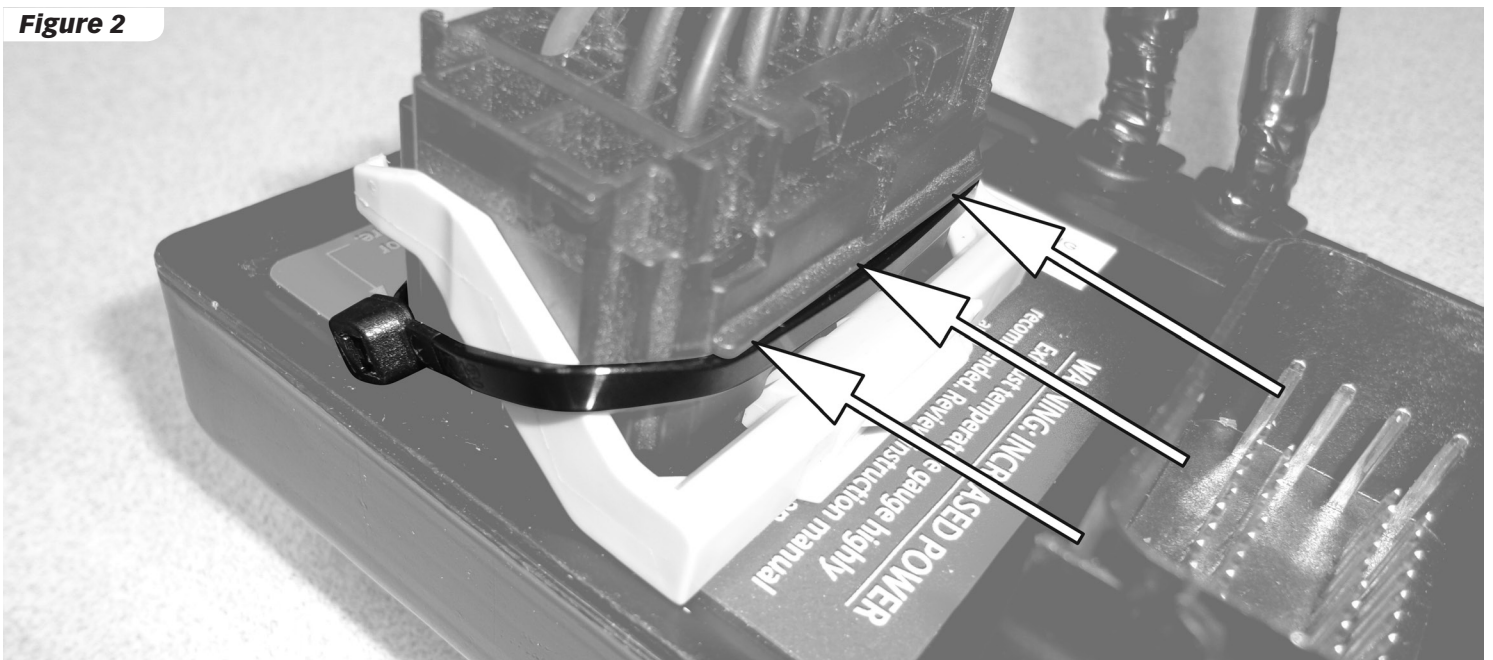

Gale Banks Engineering
546 Duggan Avenue • Azusa, CA 91702
(626) 969-9600 • Fax (626) 334-1743

Product Information & Sales: (888) 635-4565
Customer Support: (888) 839-5600
Installation Support: (888) 839-2700

bankspower.com