

Owner's Manual with Installation Instructions

Banks A-Pillar Mount

2014+ Chevy Full Size Replacement A-Pillar

THIS MANUAL IS FOR USE WITH SYSTEM 63335, 63336, 63337

Gale Banks Engineering
546 Duggan Avenue • Azusa, CA 91702
(626) 969-9600 • Fax (626) 334-1743

Product Information & Sales: (888) 635-4565
Customer Support: (888) 839-5600
Installation Support: (888) 839-2700

bankspower.com




2014+ Chevy Full Size A-Pillar Gauge Mount Installation

Removal of the OEM A-Pillar:

1. Remove the small plastic covers on the handle by prying them off with a small flat head screwdriver. See Figure 1, 2.


See Figure 1, 2.

Figure 1

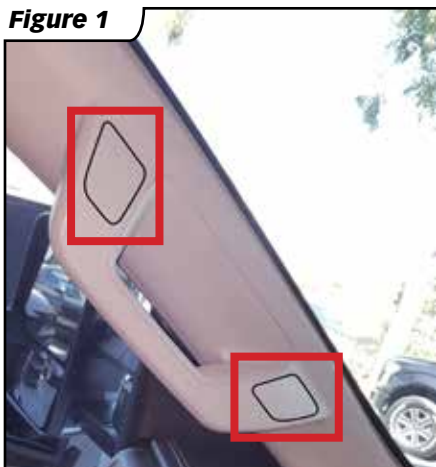

2. Remove the two bolts behind the plastic covers with a 10mm socket wrench. See Figure 2.


Figure 2

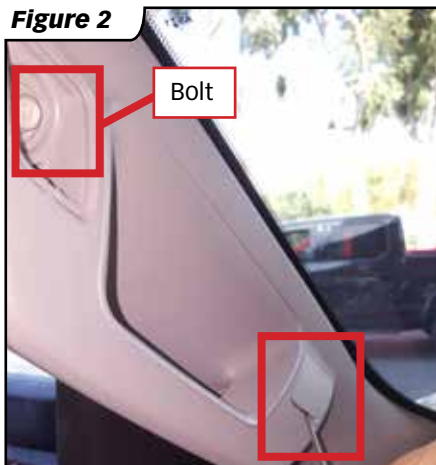

3. Grab the A-Pillar handle and pull down to unclip it from the chassis. See Figure 3.

See Figure 3.

Figure 3

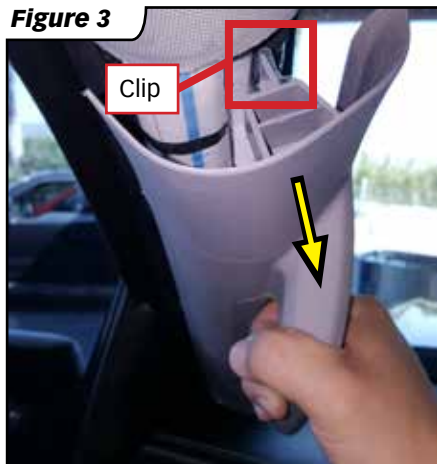

4. Slide the A-pillar out as shown in Figure 4.

Figure 4



Installation of the A-Pillar Gauge Mount:

Prior to installation of the A-Pillar Mount, it is necessary to have the gauge wiring finished. Make sure to leave enough extra wire length (~20" -24") to easily mount the gauge.

5. Insert the supplied well nut as shown in **Figure 5, 6.**

Figure 5



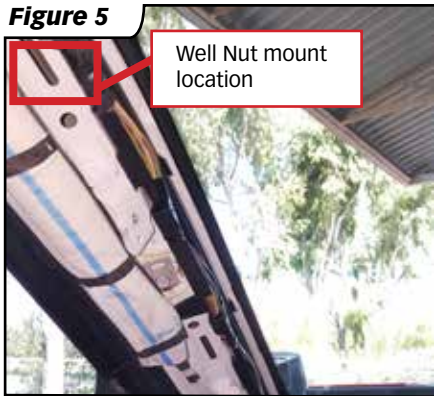


Figure 6

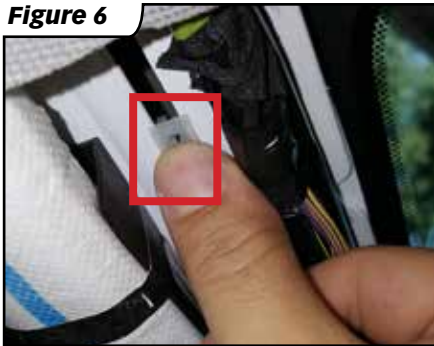

6. Test fit the iDash 1.8 onto the A-Pillar Gauge Mount. For a proper press fit, the iDash 1.8 should slide 2/3 (11mm or 7/16") the way with no effort. **See Figure 7.**

Figure 7

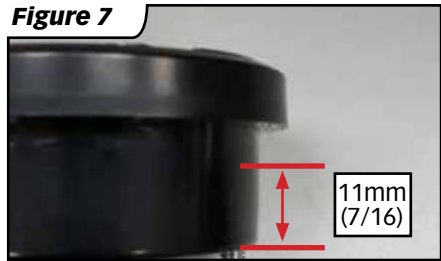

A. If the fit is too tight, sand the hole's edge of the A-Pillar to open the hole a bit using 100-200 grit sandpaper or a rounded file.


B. If the fit is too loose to hold the iDash 1.8 in place, use the mounting sleeve to install the iDash 1.8. The mounting sleeve is installed behind the A-Pillar. **See Figure 8, 9.**

NOTE: If using the mounting sleeve the iDash should be installed prior to installation of the A-Pillar Mount onto the vehicle. **See Figure 9.**

Figure 8



Figure 9

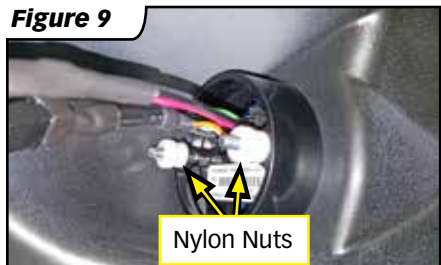

7. Slide the A-Pillar into place. Check to make sure that no wires in the way of the installation. **See Figure 10, 11.**

NOTE: Make sure to slide the A-Pillar between the dash and plastic block. **See Figure 11.**

Figure 10

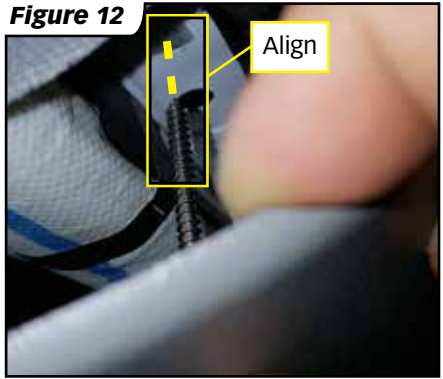


Figure 11



8. Check the alignment of the screw to the well nut. **See Figure 12.**

Figure 12



9. Check to see that the weather stripping will not be pinched or that wires are not sticking out from the side of the A-Pillar Mount.


10. Tighten the screw until snug. DO NOT exert excessive force. **See Figure 13**

Figure 13



11. If not already done, install the iDash 1.8. The extra wire can be stuffed inside the A-Pillar. **See Figure 14.**

Figure 14

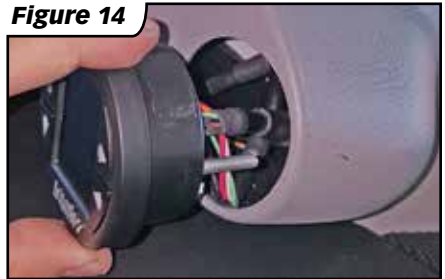

END OF INSTALL